

Kozmic Motorsports

8967 Gilder Rd., Ste. A
Houston, TX 77064-1286
281-890-4772

Sales@KozmicMotorsports.com




Evo 8/9 Keypad Mount Installation

* Note: This kit is intended to be installed for off-road use only. Please consult Keypad manufacturer's information sheet regarding usage and programming. *

Step 1: Remove the OEM Ashtray by opening the lid then gently pulling it straight up towards the center of the roof. It will pivot out of its latching system and come out, set aside.



Step 2: Remove the storage tray just above the console area, located right below the AC Controls. This is done by removing the 2 Phillips head screws shown with red arrows below. Once those are removed the panel will pull straight out from the dashboard.

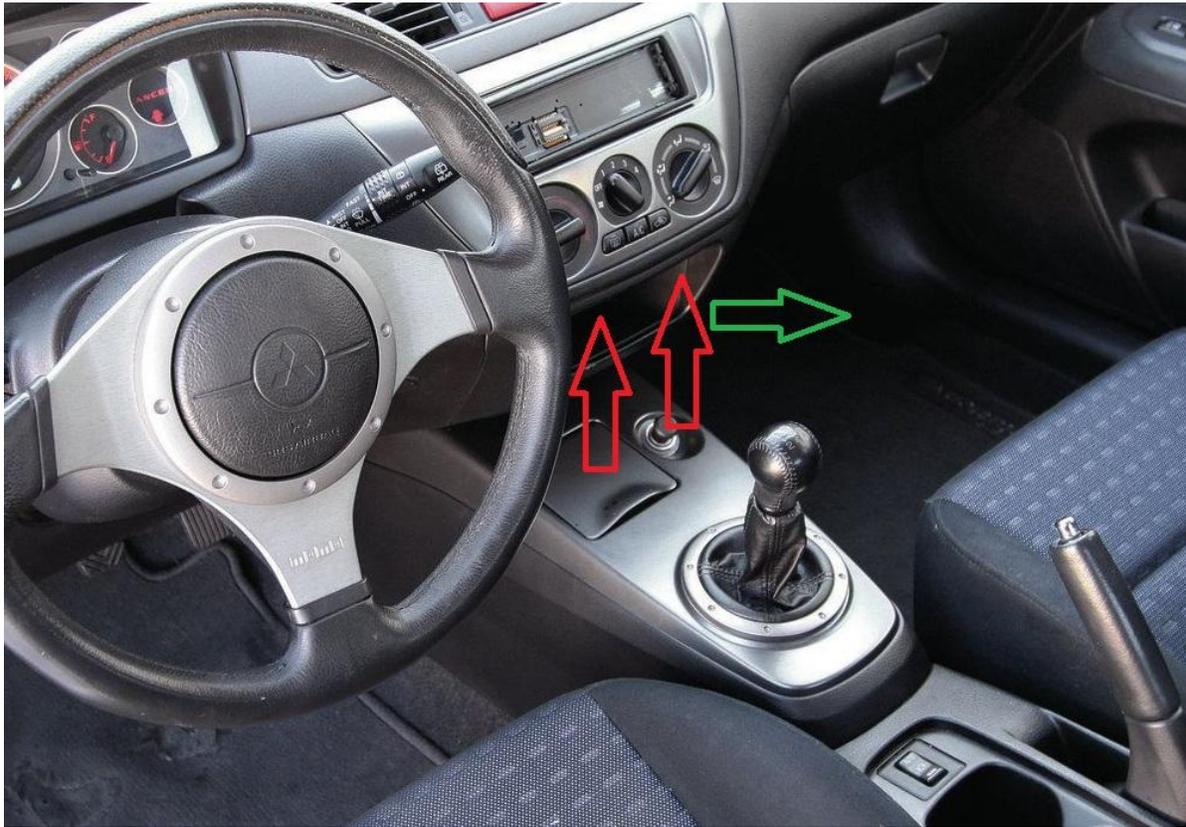

Step 3: Install your keypad into the mounting system using the supplied hardware that came with your keypad. Note: These should consist of nylon locking nuts, if not we recommend replacing the hardware with these nylon lock nuts. Tighten to spec (Typically ~36 in/lbs), we have found a swivel socket to be the easiest way to secure these fasteners.



Step 4: Connect the CAN Cable to your keypad and then guide it into the OEM console opening, routing it to your ECU or other connection point as needed.

Step 5: Install the keypad mount by tilting the top of the mount up to the dash and tucking in the rear of the lower section first. It will then swivel down and click into position just like the OEM Ashtray functions.

Step 6: Install the OEM Storage tray on the dash board and complete your CAN wiring installation. Its now time to program the keypad and enjoy!



Questions? Contact us via email for technical assistance. Sales@KozmicMotorsports.com